
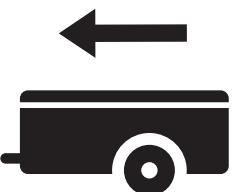



Инструкция по установке
Toyota Land Cruiser 200
(2007-)

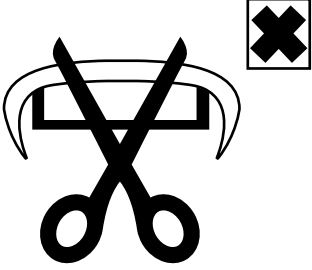


Арт.: F.5703.001
F.5703.003

 1500 kg	 75 kg	D = 10,1 kN	
---	---	--------------------	---


$$D \text{ (kN)} = \frac{\begin{array}{c} \text{Car icon} \\ \text{MAX kg} \end{array} \times \begin{array}{c} \text{Trailer icon} \\ \text{MAX kg} \end{array}}{\begin{array}{c} \text{Car icon} \\ \text{MAX kg} \end{array} + \begin{array}{c} \text{Trailer icon} \\ \text{MAX kg} \end{array}} \times 0,00981$$

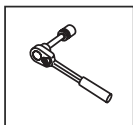

Вкрутить/выкрутить используя инструмент

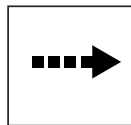


Движение

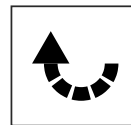

Поворот





Вкрутить/выкрутить не затягивая

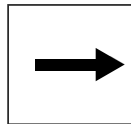













Расположение




Используемый инструмент:

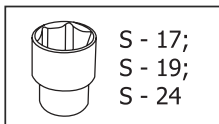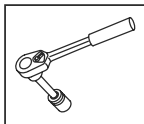




S - 17;
S - 19;
S - 24

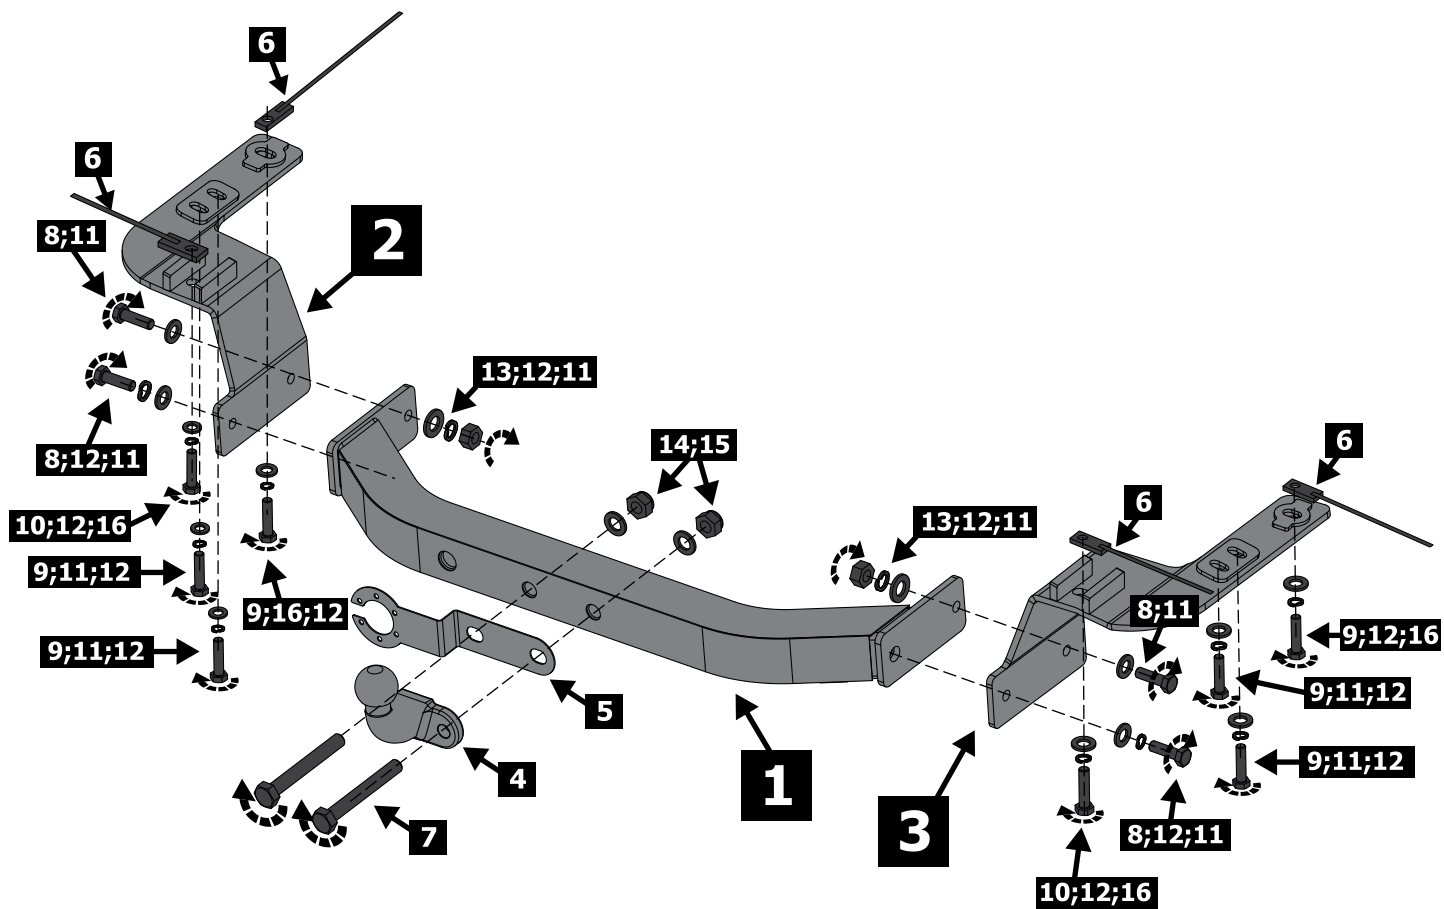


1	x1	Балка	
2	x1	Кронштейн левый	
3	x1	Кронштейн правый	
4	x1	Крюк	
5	x1	Подрозетник	
6	x4	M12	
7	x2	M16x110	
8	x4	M12x1,25x40	
9	x6	M12x1,25x50	
10	x2	M12x1,25x70	
11	x10	Ø 12	
12	x12	Ø 12	
13	x2	M12x1,25	
14	x2	Ø 16	
15	x2	M16	
16	x4	Ø 12	

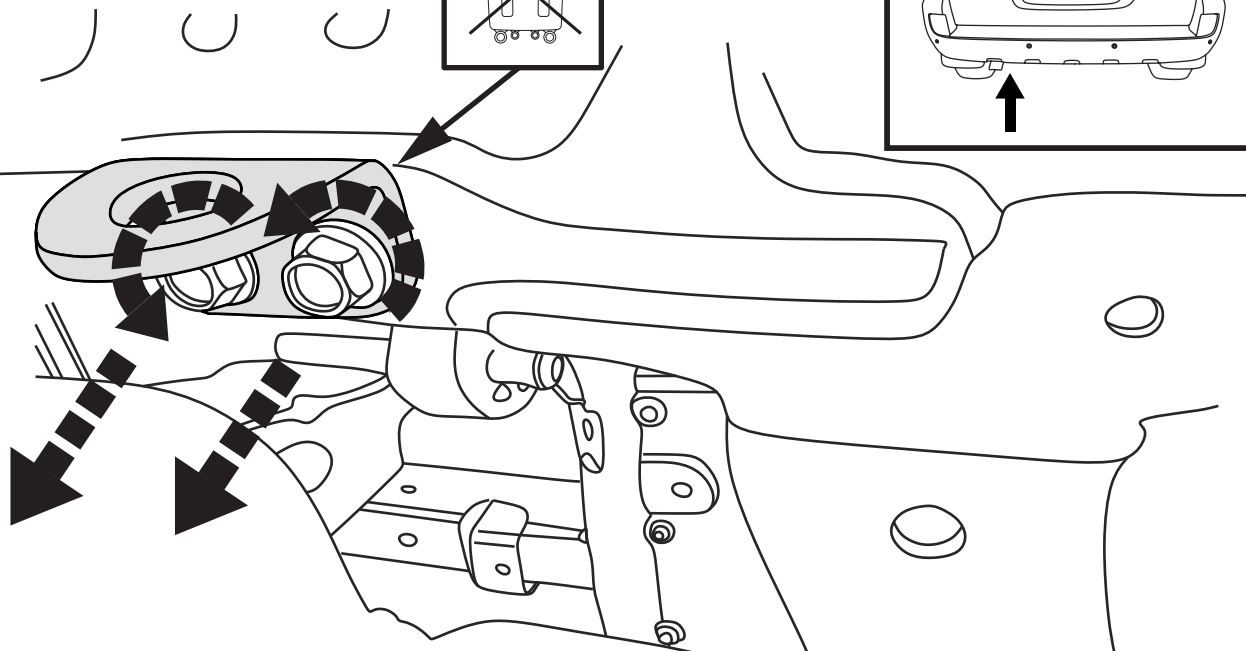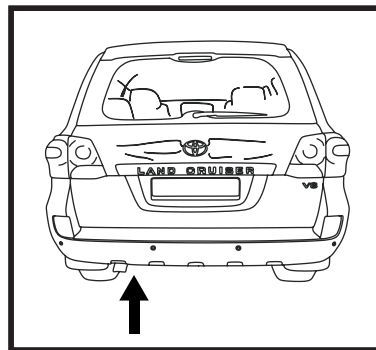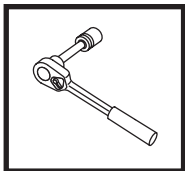


1

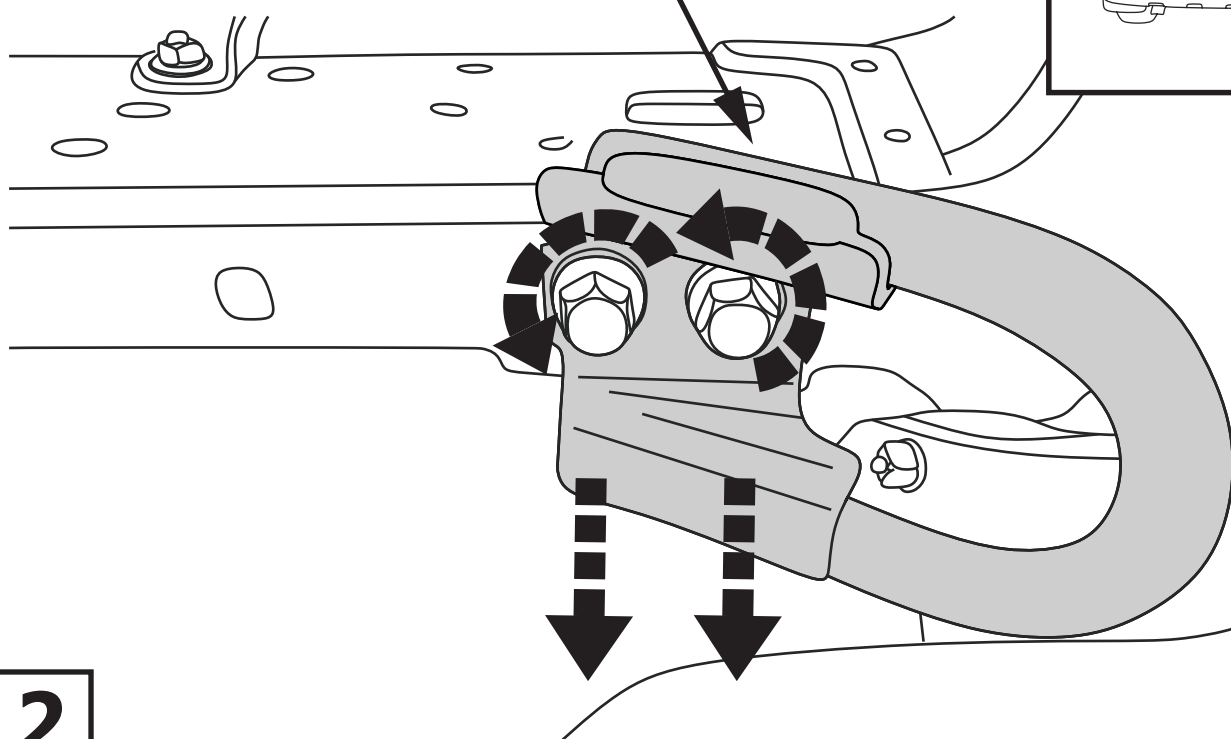
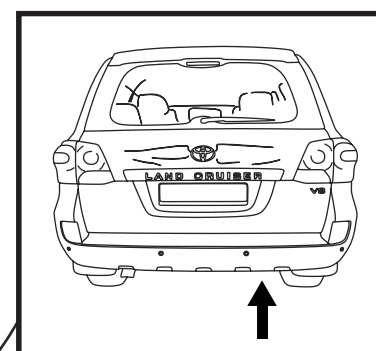
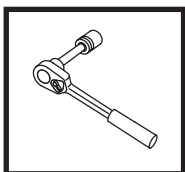


2

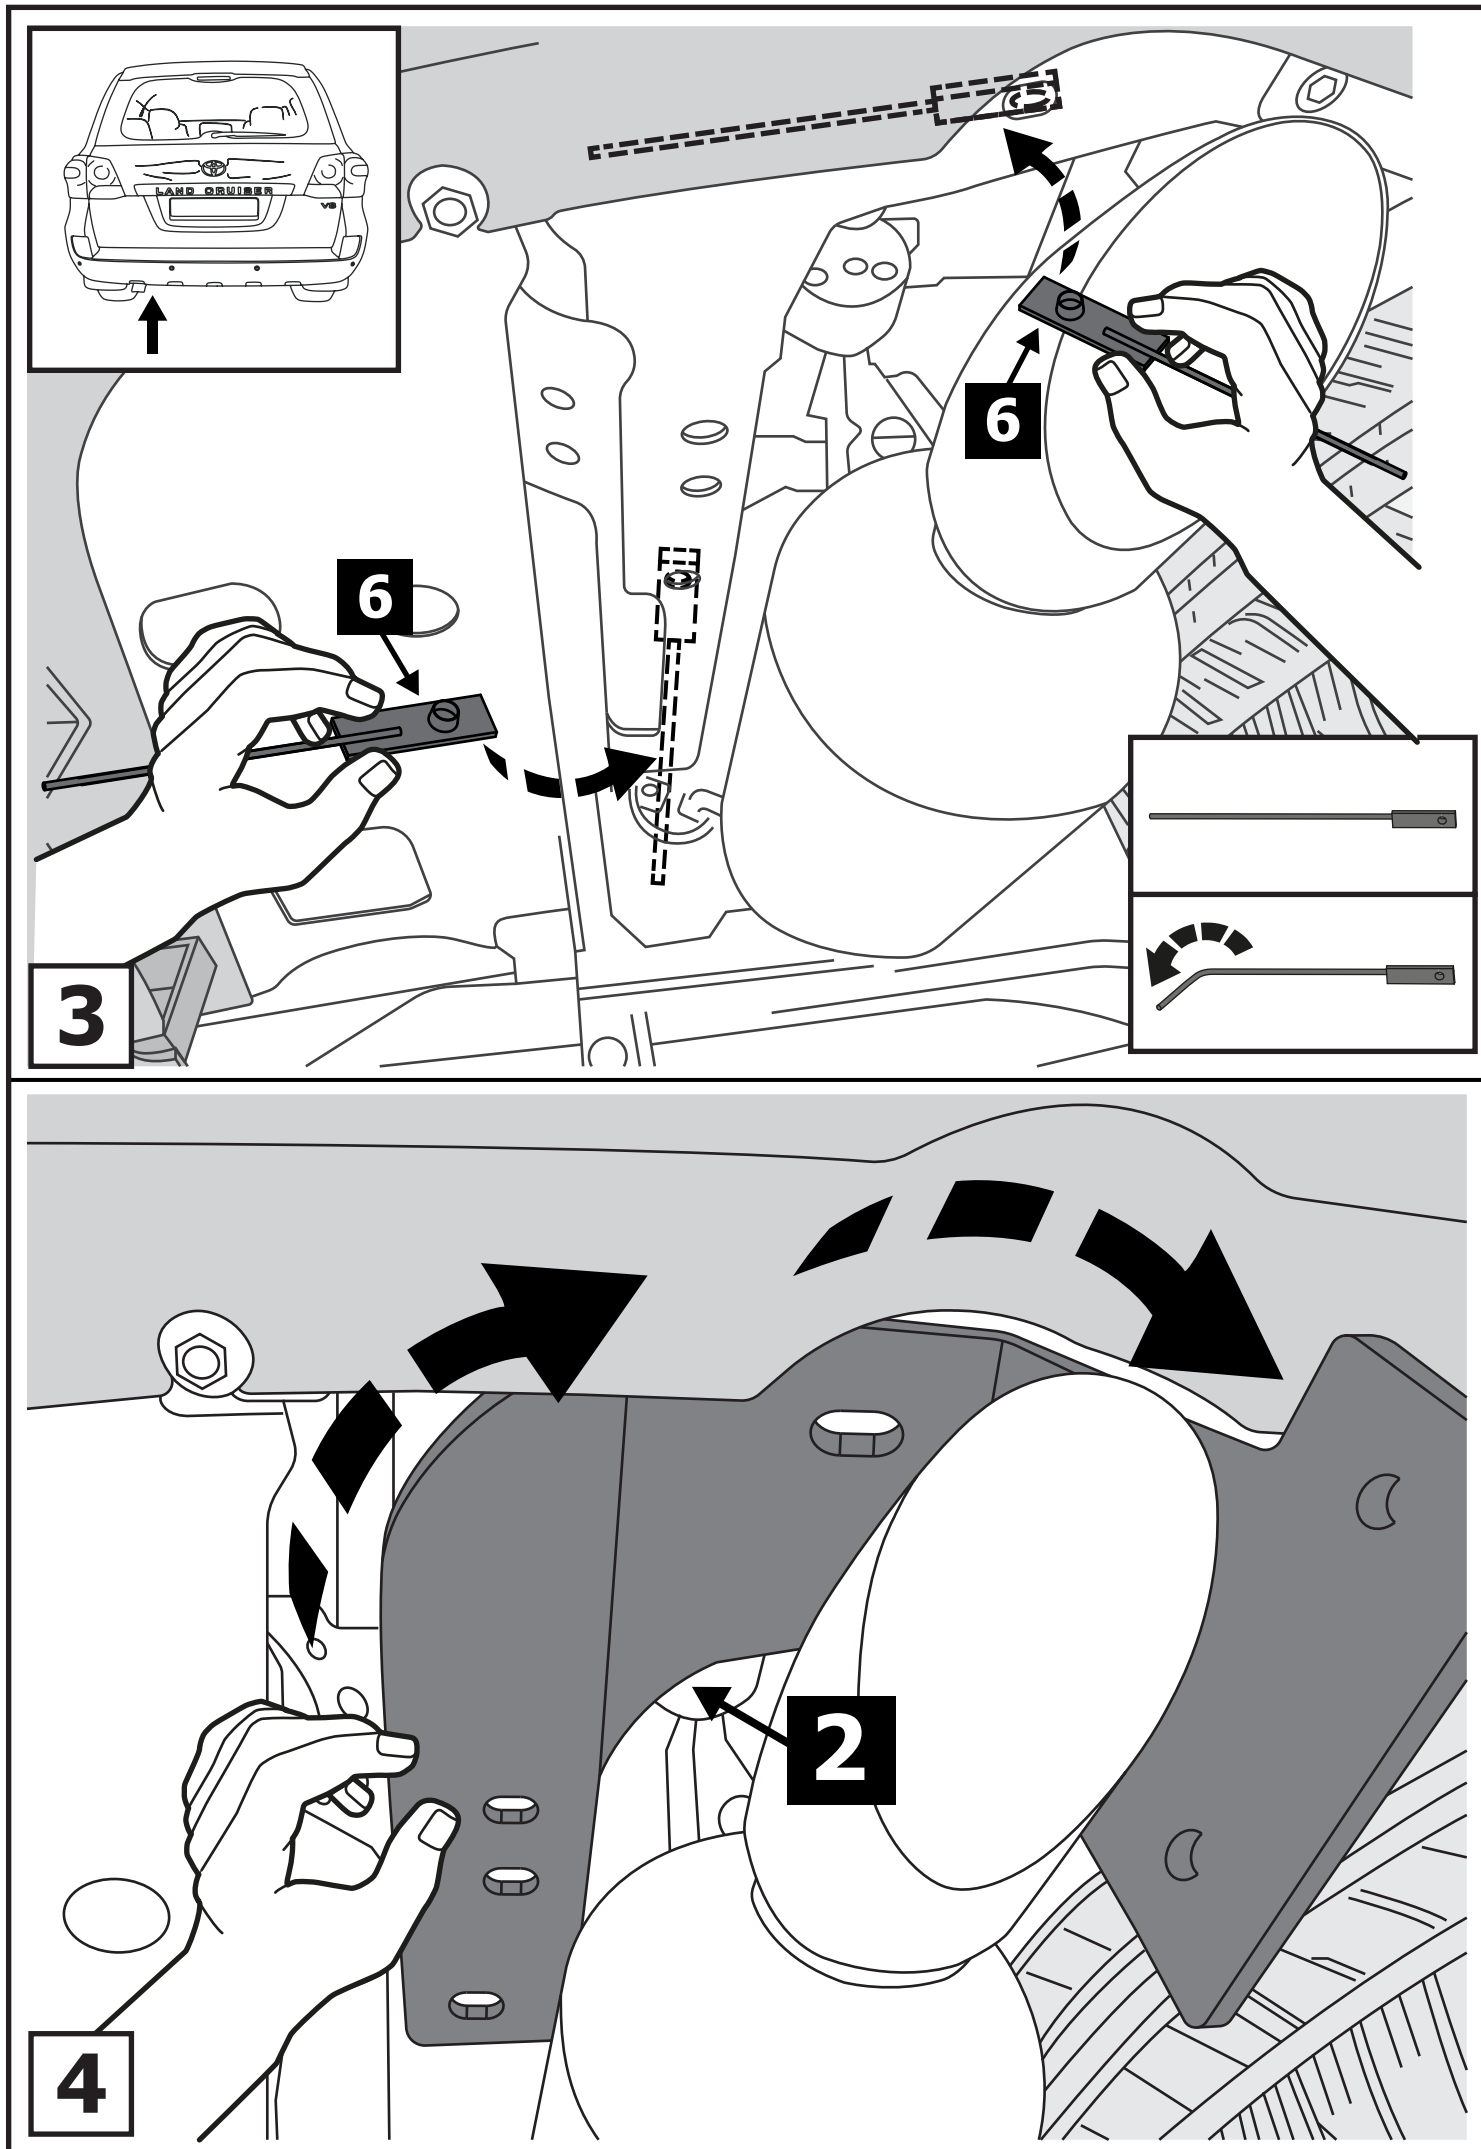



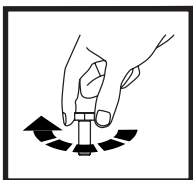




5

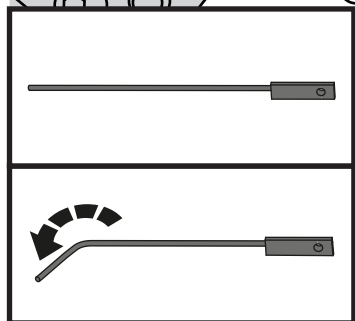
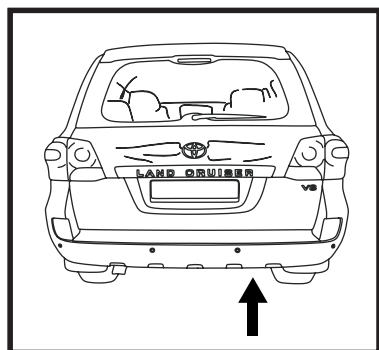
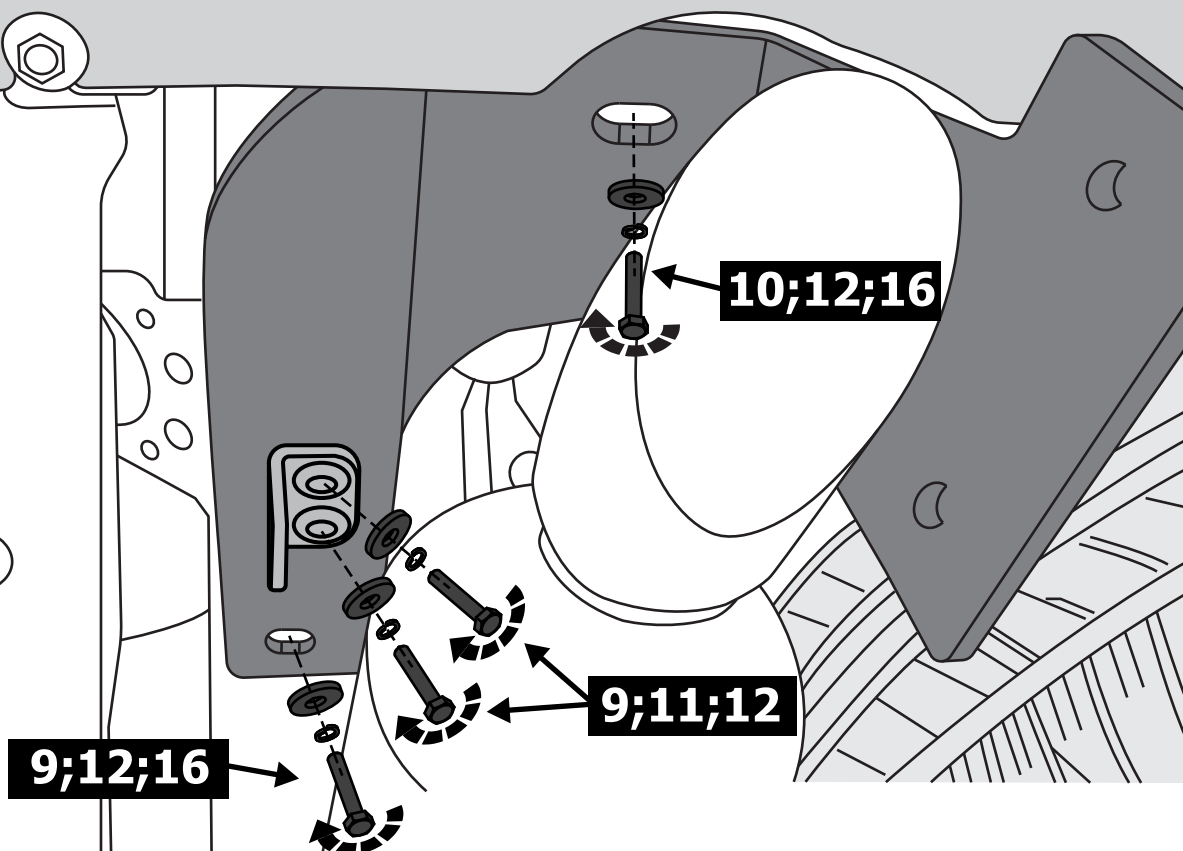




6

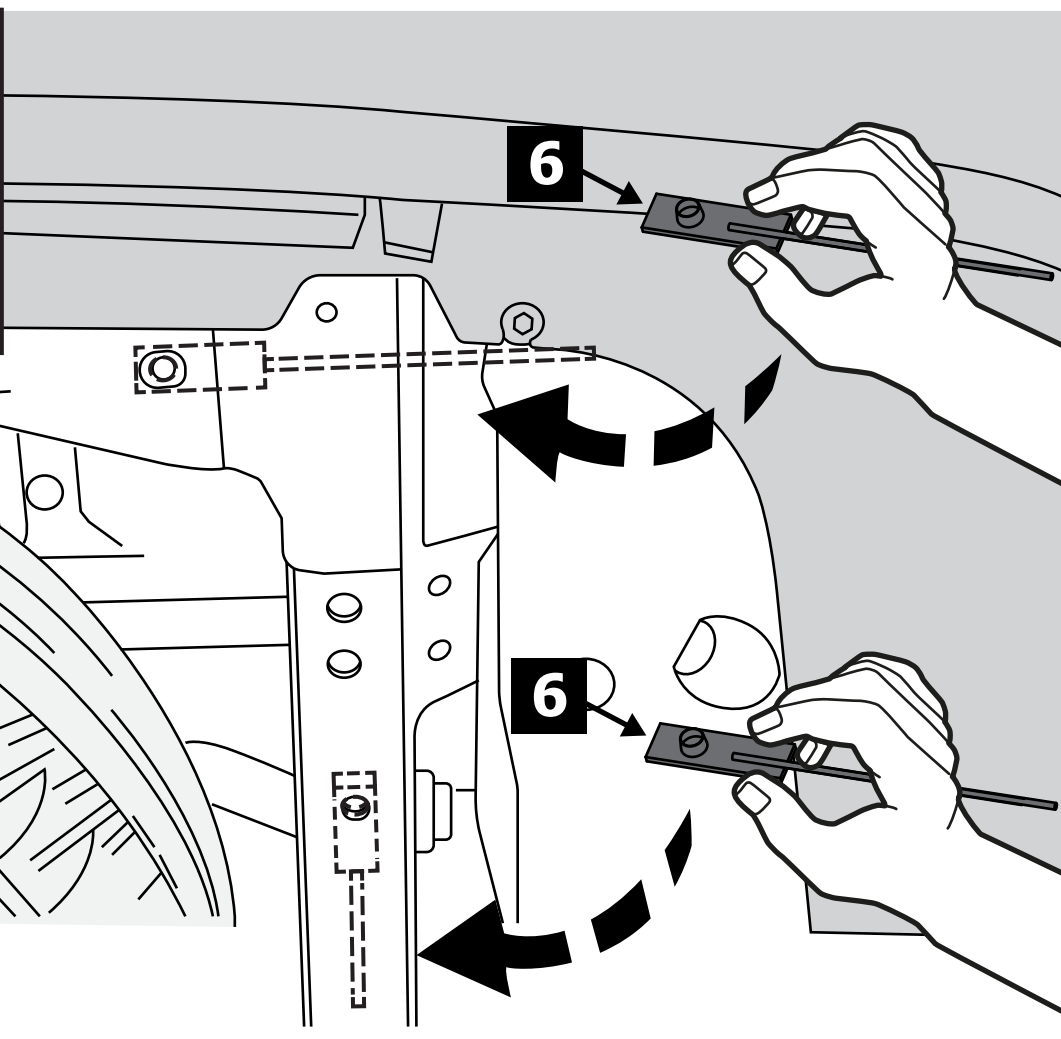

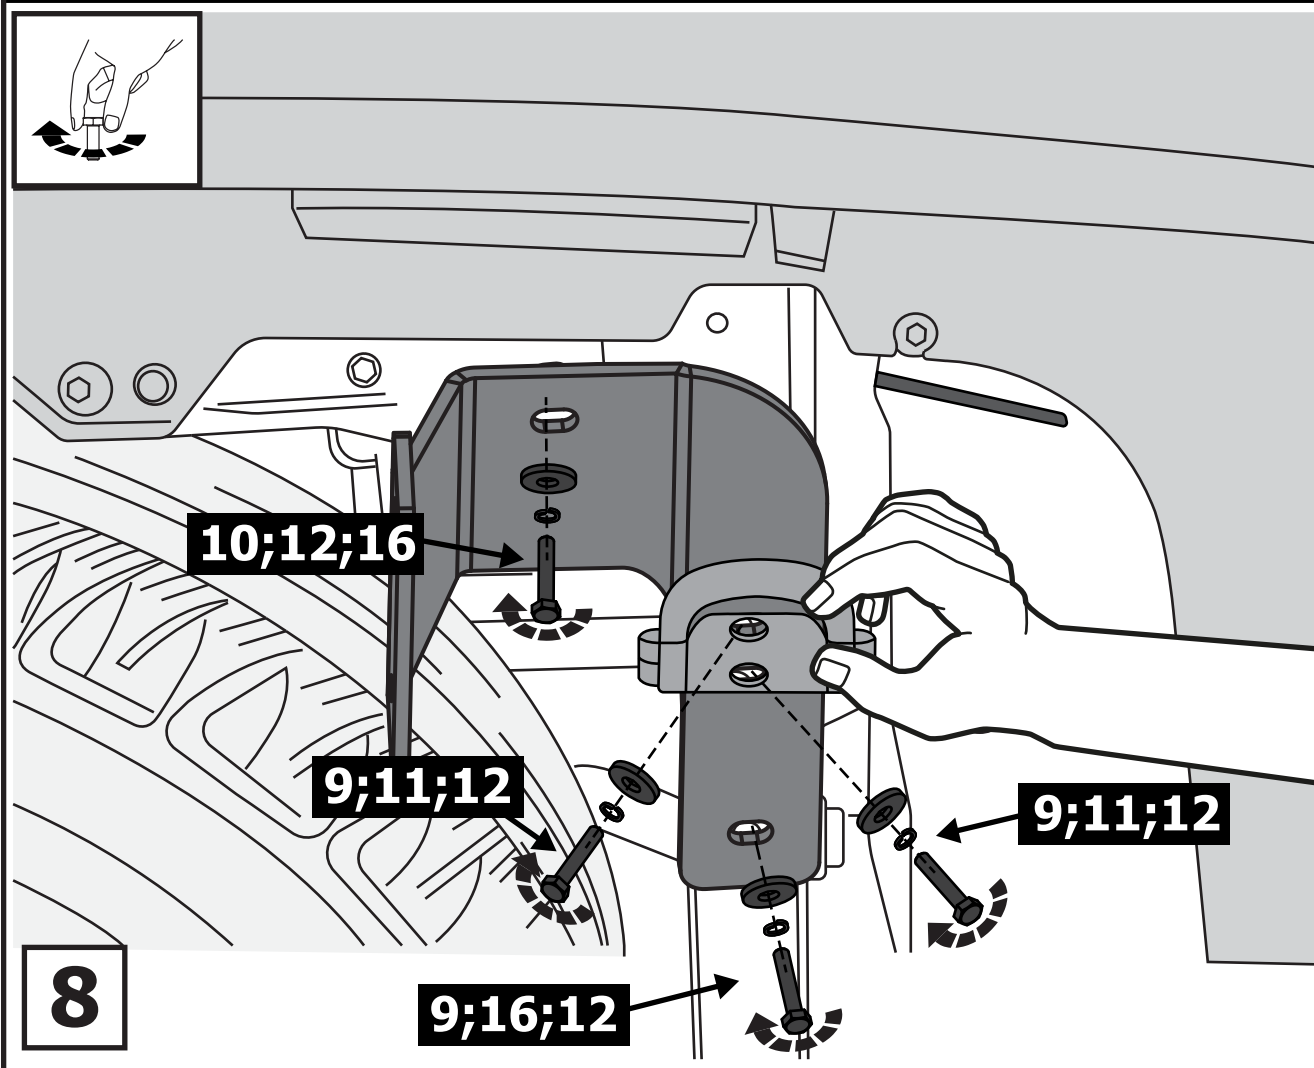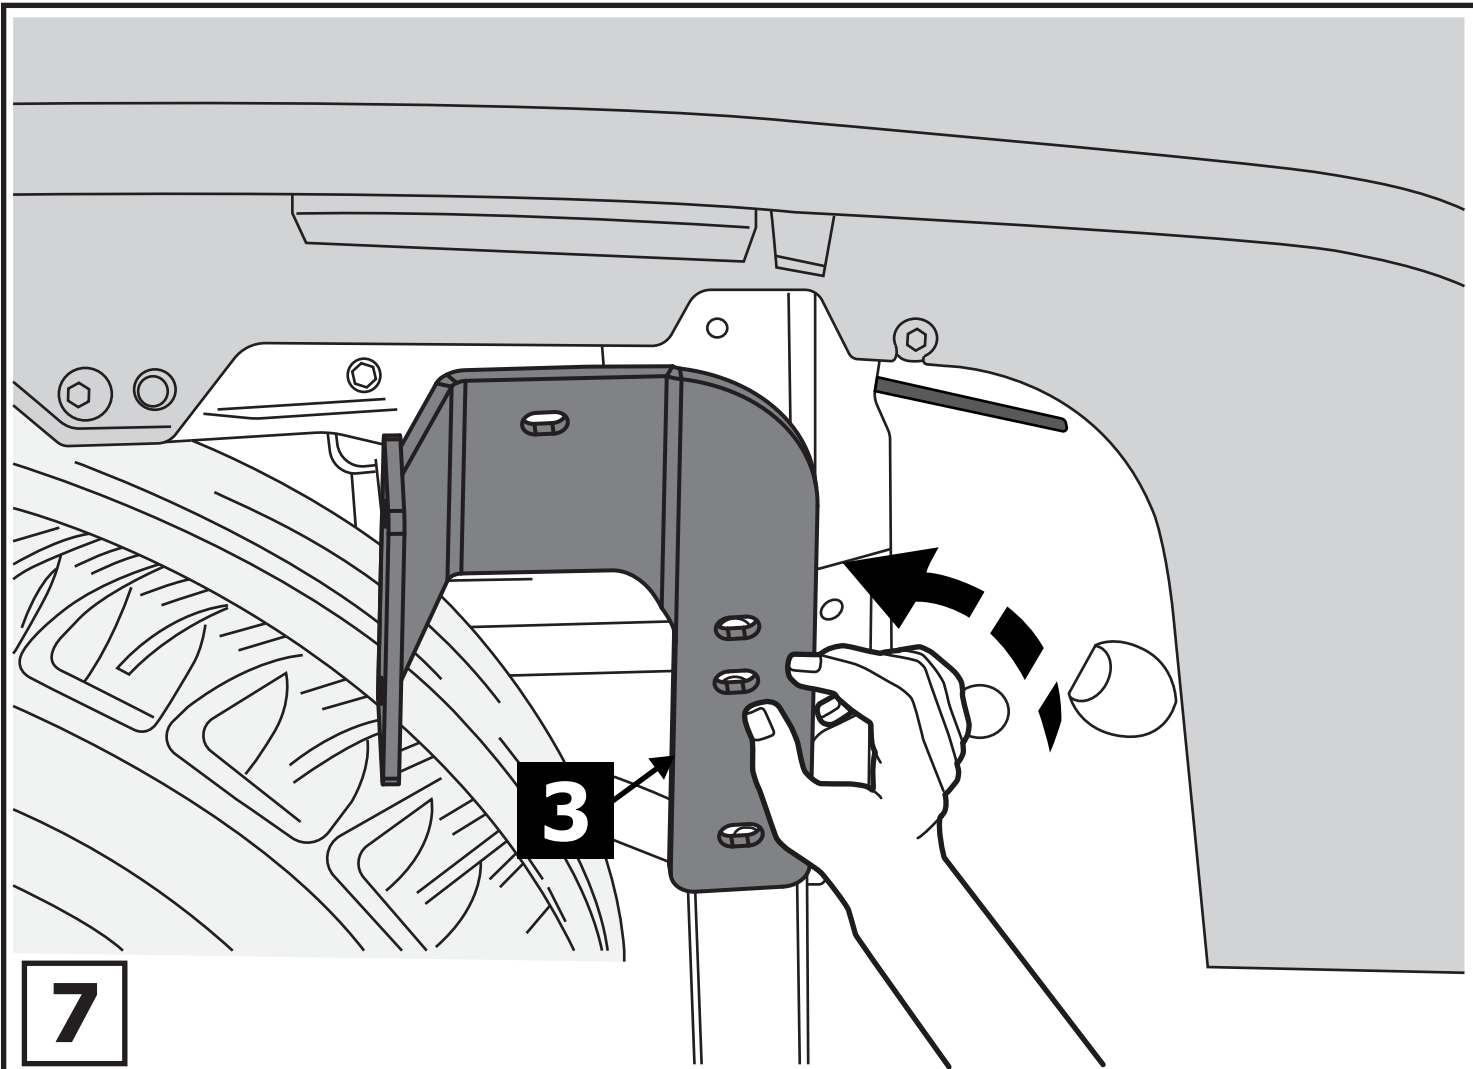

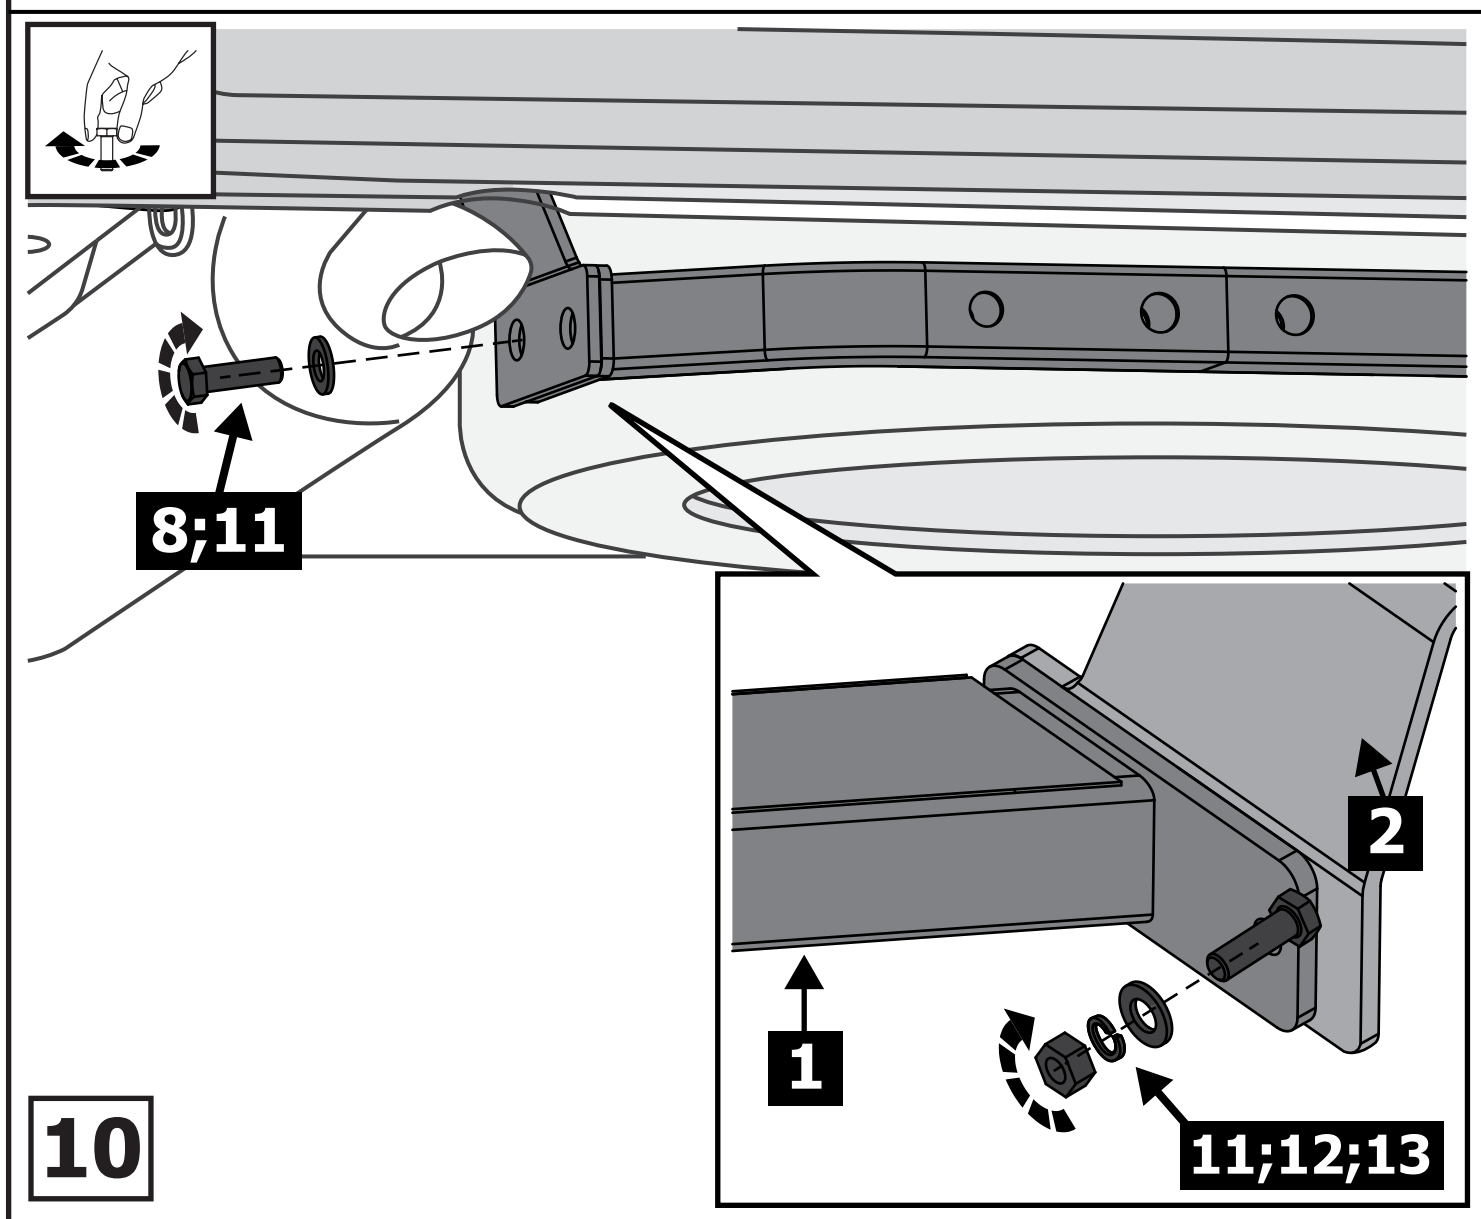
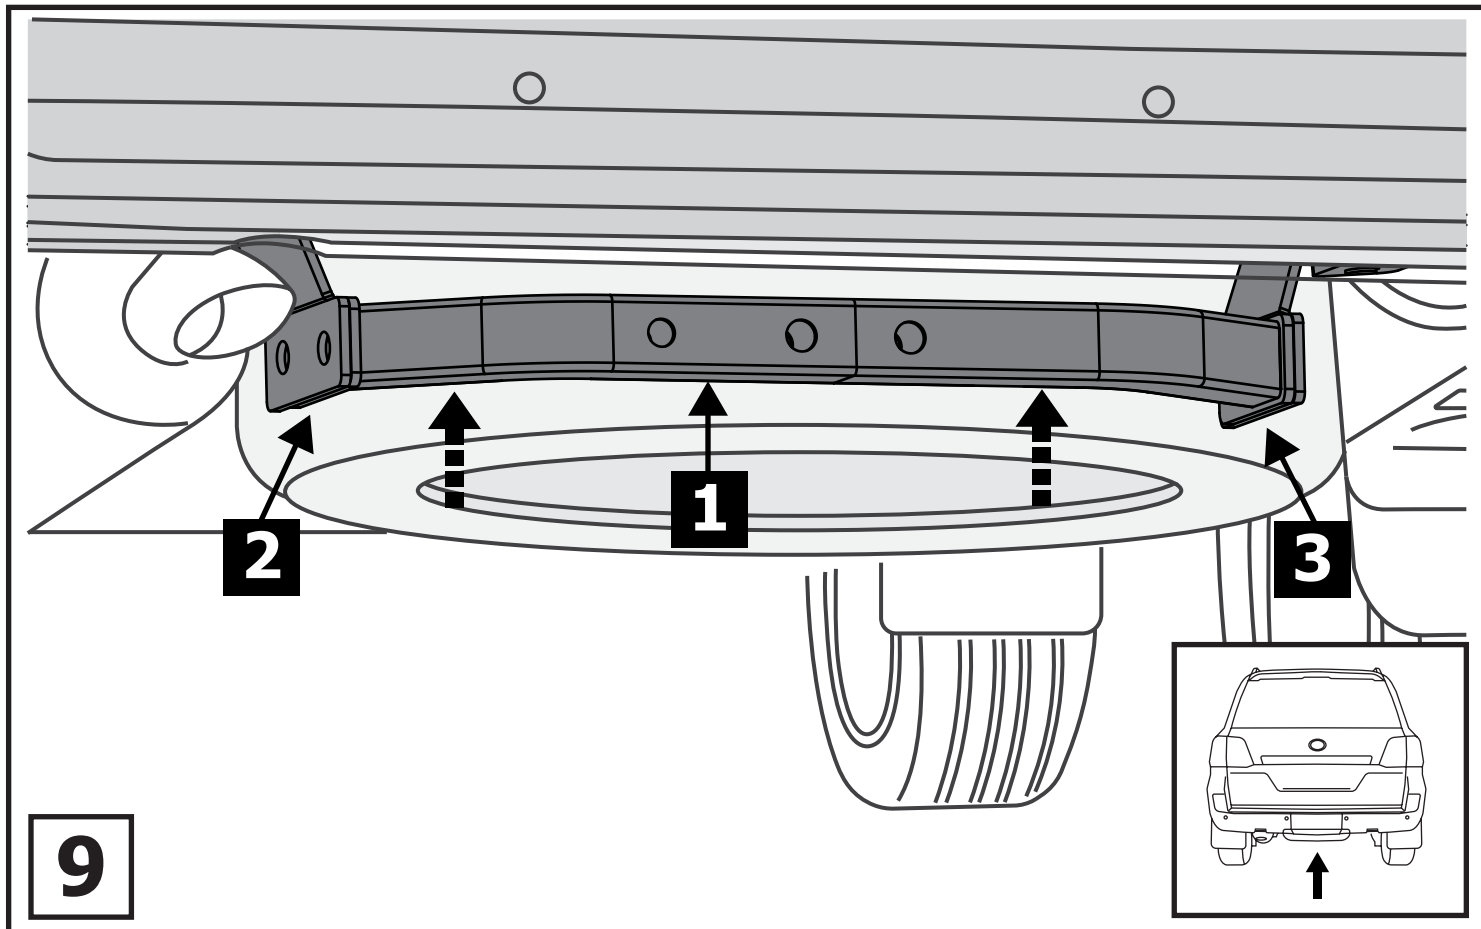


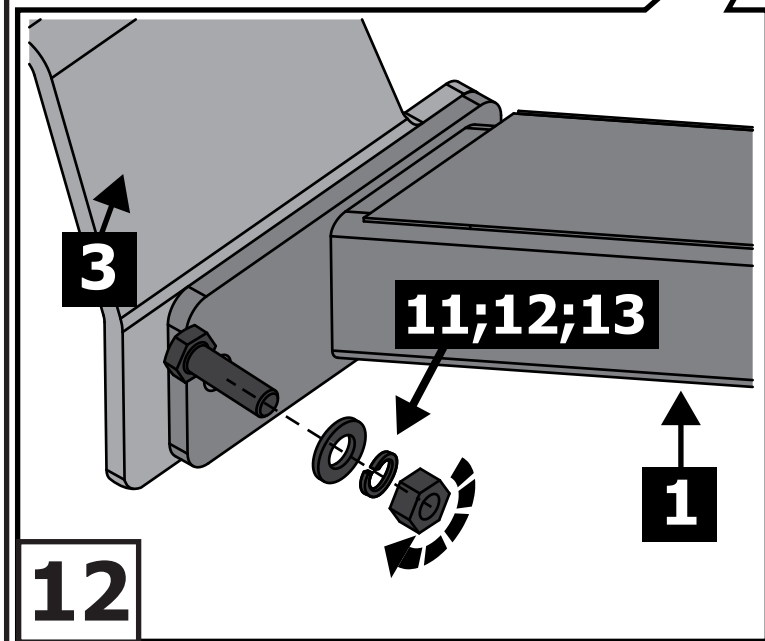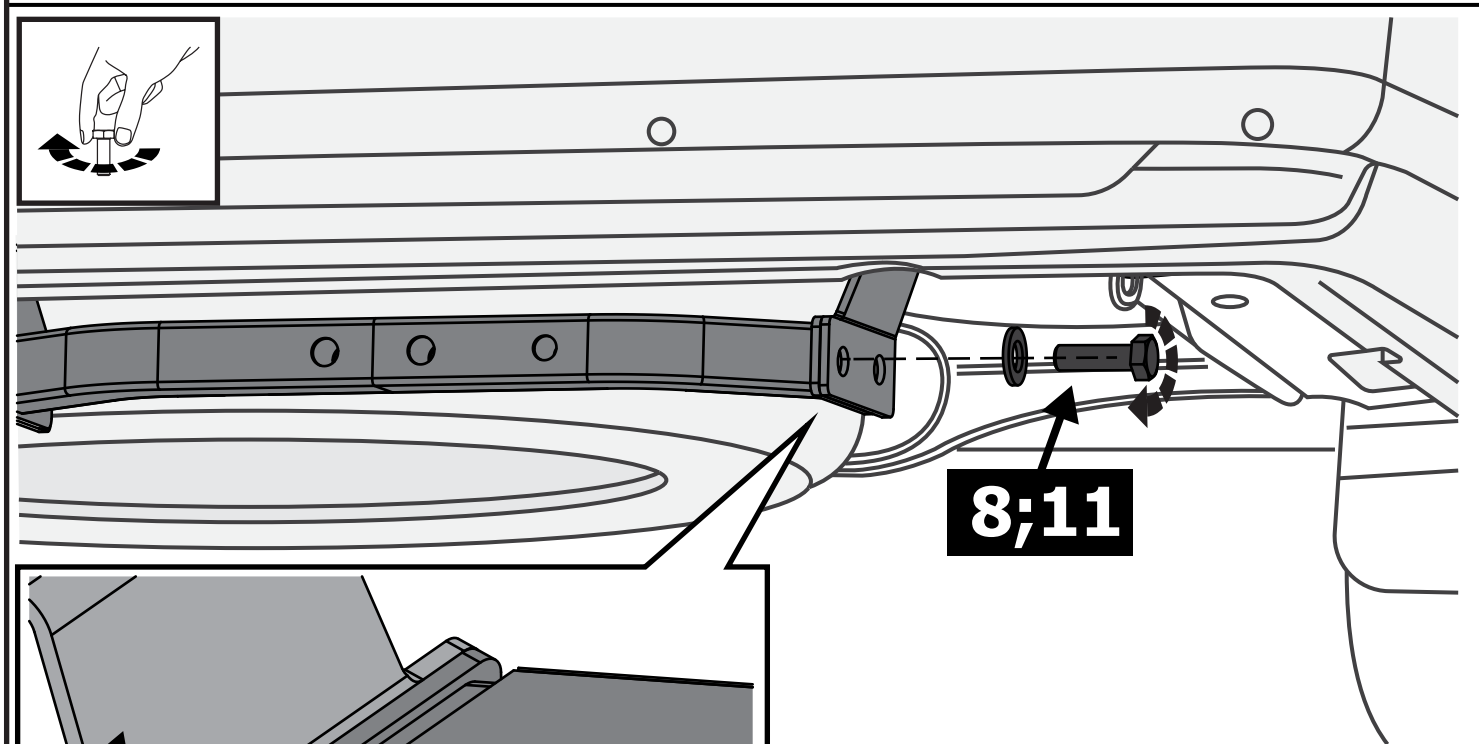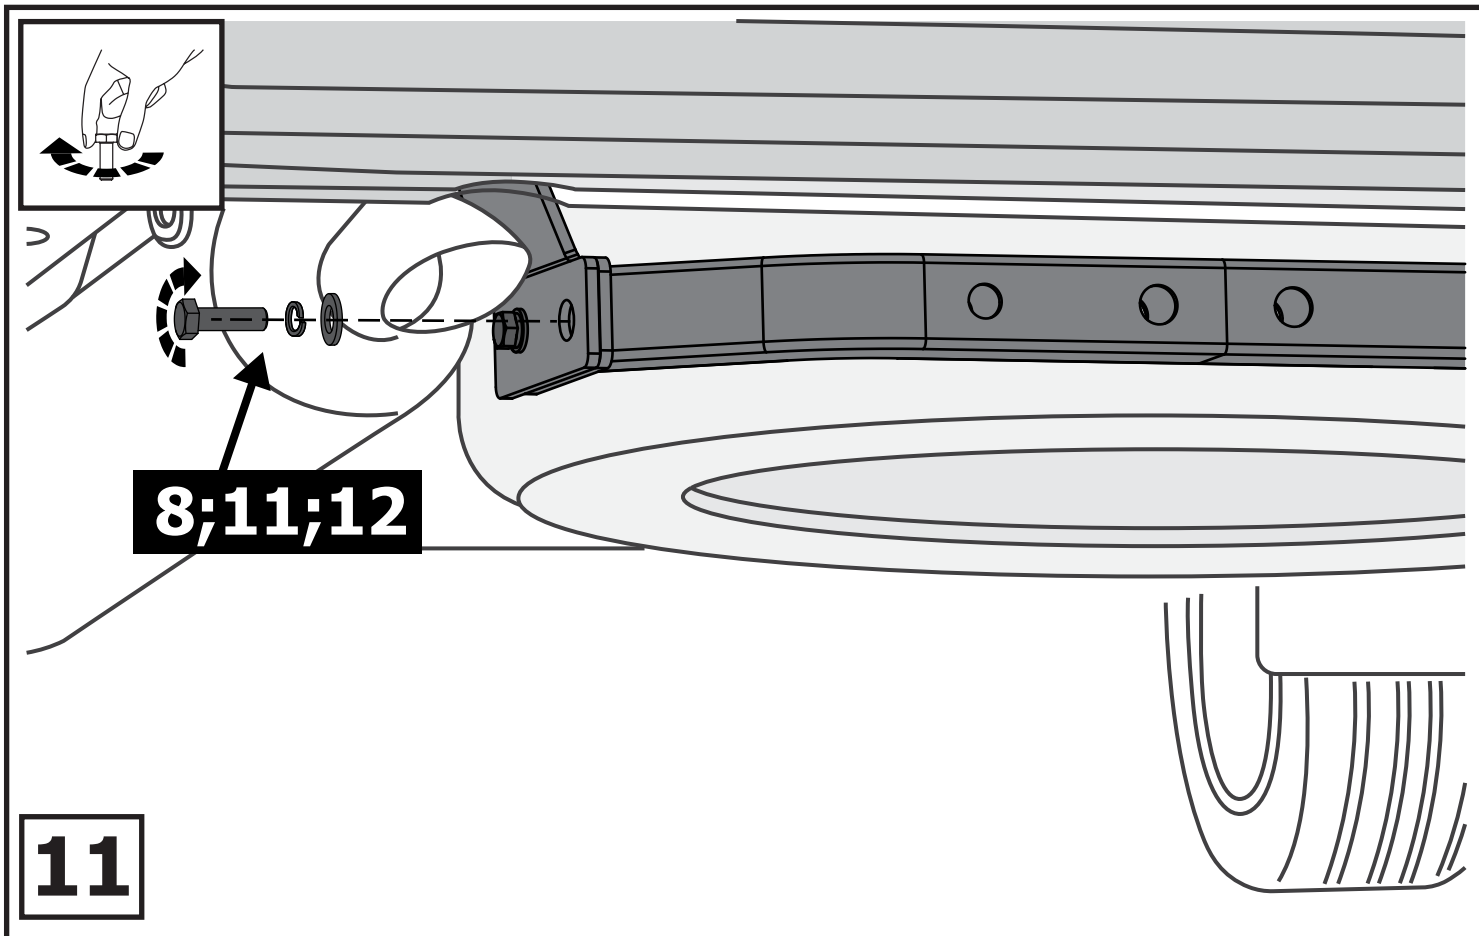

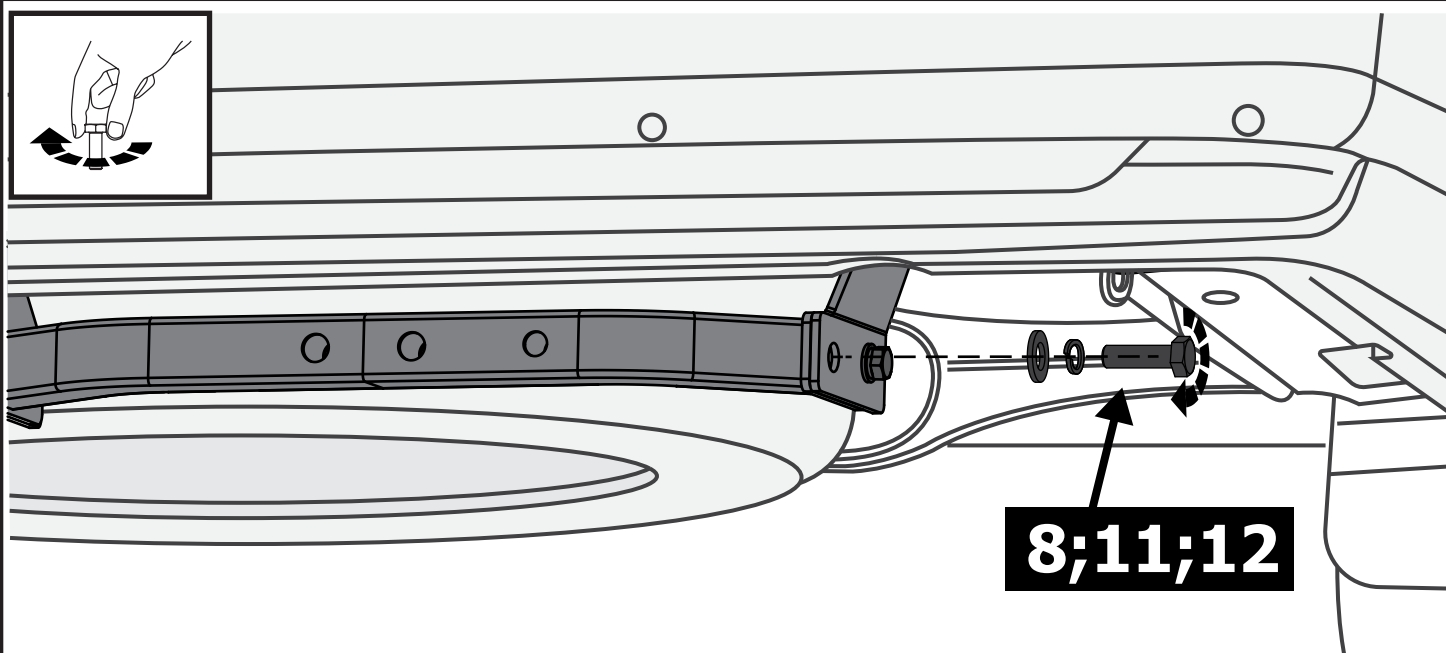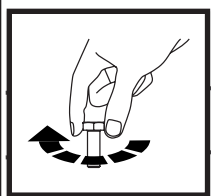

8;11;12


13

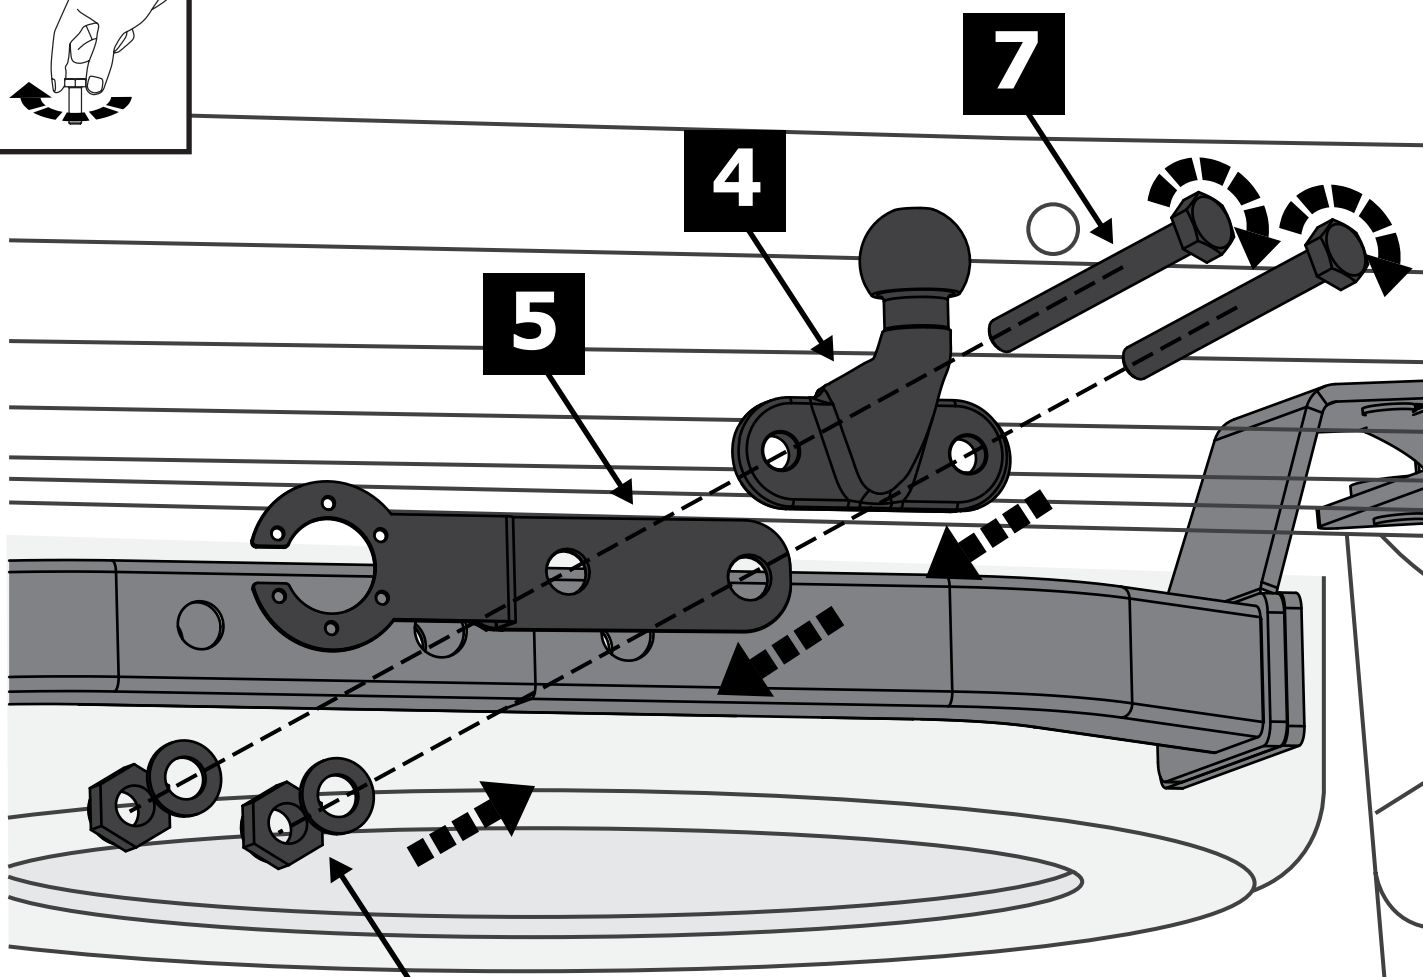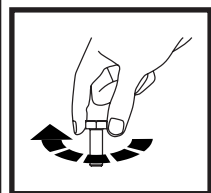

14;15

14

15

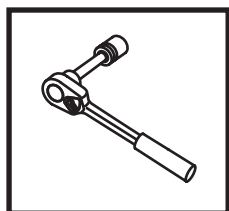

Затянуть все резьбовые соединения

M12 = 81 Nm M16 = 157 Nm