
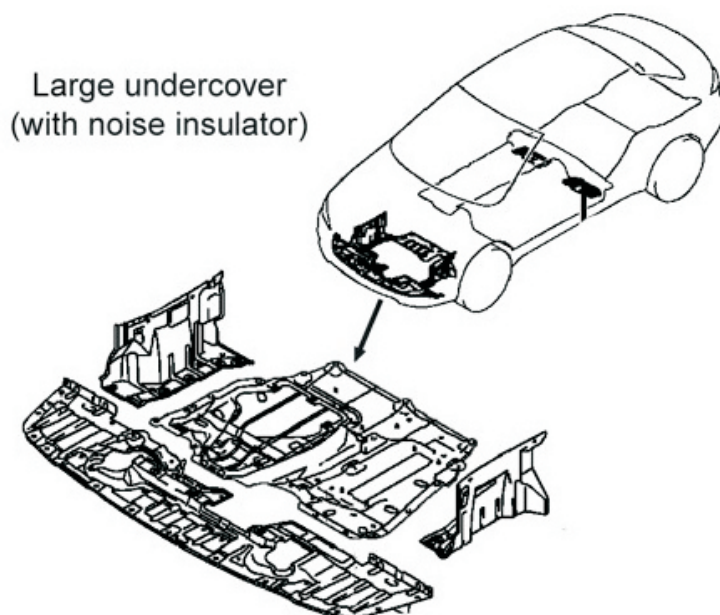


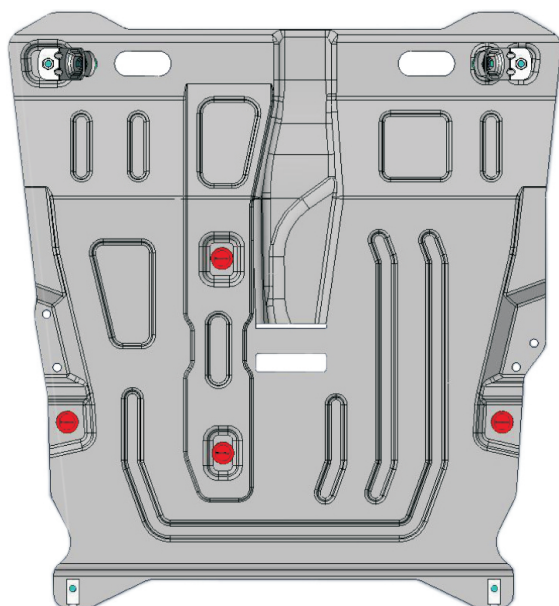

GB Fitting instruction for : **Underride protector**

RU Инструкция для установки : **Защита картера**

Part number : **MZ314245**

Installation kit : **MME31838**

Application:

Model name	Model year	Body	Model series
Lancer, 2WD only	2008	All	CY0, CX0





Read these instructions carefully before starting the installation. Due to the nature of this product, it is highly recommended that it is installed by a Mitsubishi Authorized Service Point. Modifications related to design, construction, illustrations and text are reserved.




Необходимо внимательно ознакомиться с данной инструкцией перед началом установки.
Настоятельно рекомендуем производить установку оригинальных продуктов "Mitsubishi" на специализированных авторизованных сервисных центрах "Mitsubishi".
Все права на конструктивные изменения, изменения, касающиеся внешнего вида продукта, а также изменения в иллюстрациях и тексте защищены.


MME31838

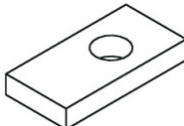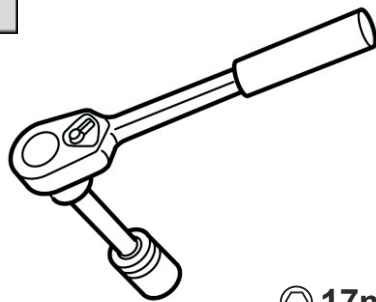	A		B	 4 x M 10x20	C1
 X 2		 X 2 -SD 3005		 2 x M 10x25	C2
	D		E		F
 6 x Ø10		 2 x Special -SD 7001		 6 x Ø10	
	 ⌀ 17mm				



1

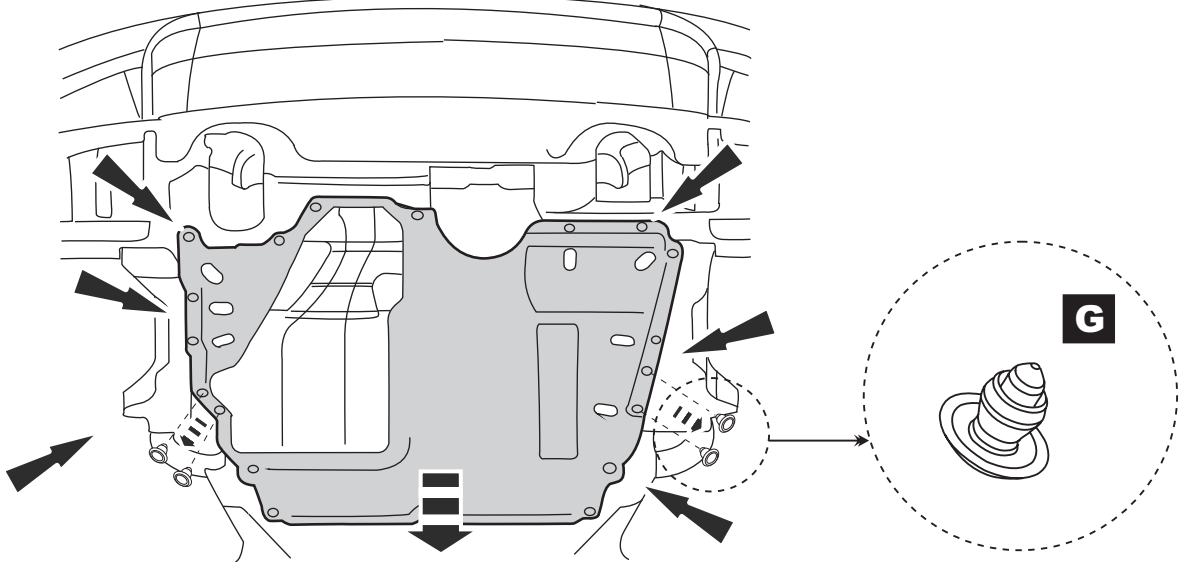

2

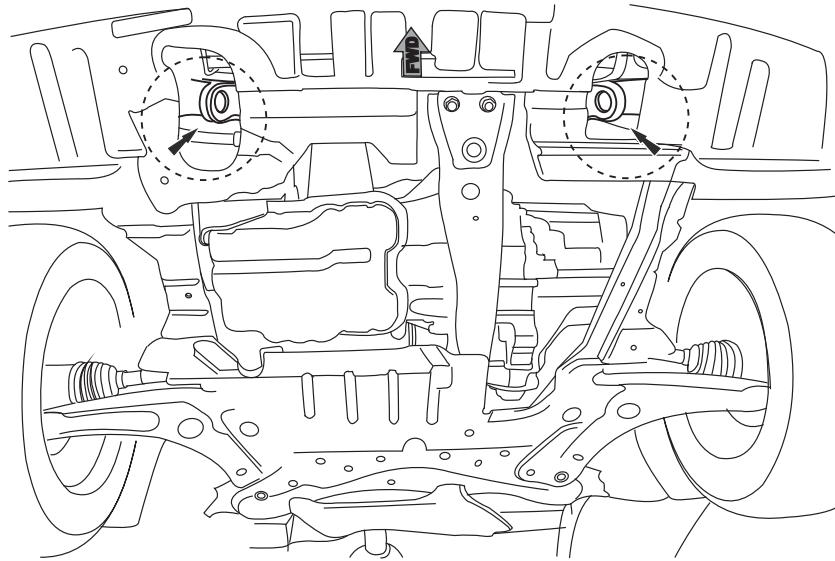


3

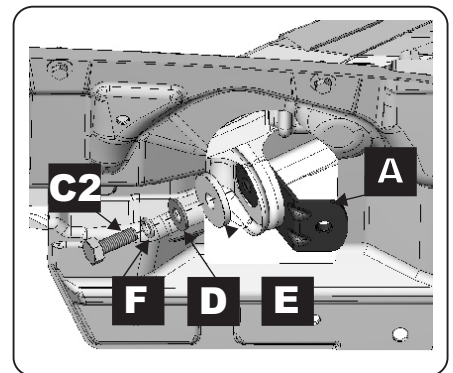
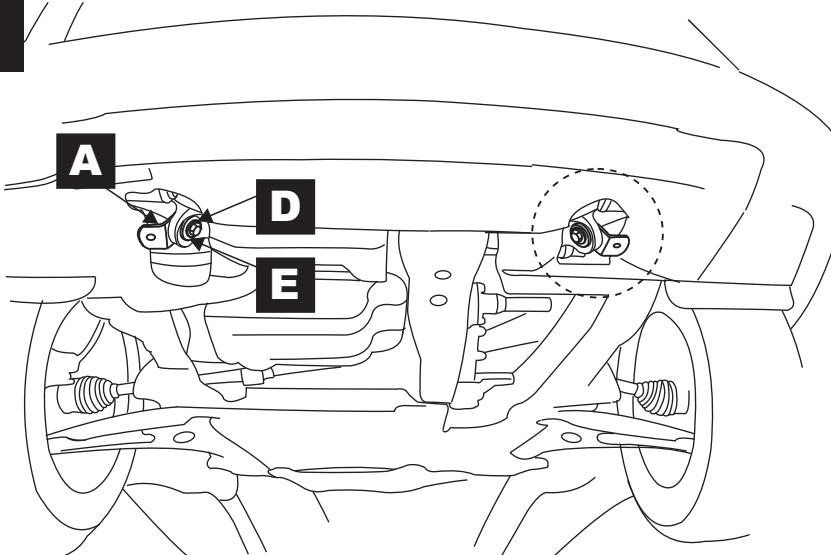


BUY GENUINE PARTS FOR TOP PERFORMANCE


4

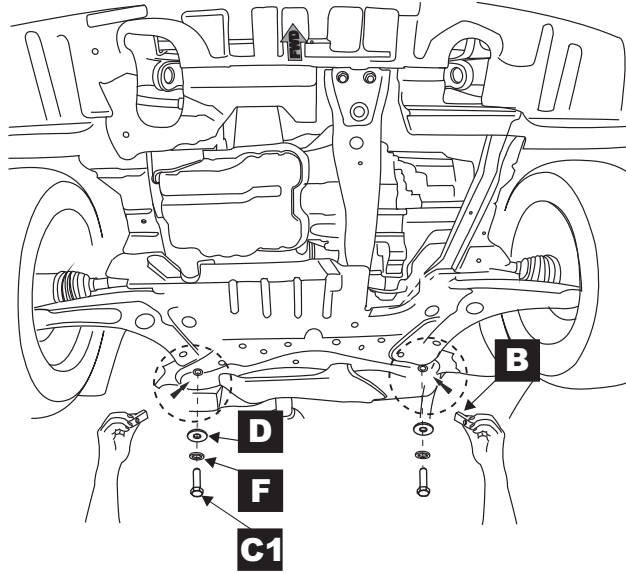

5

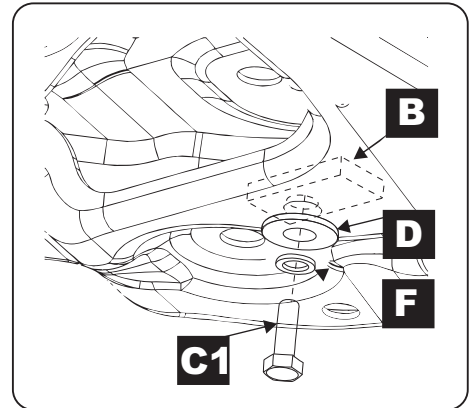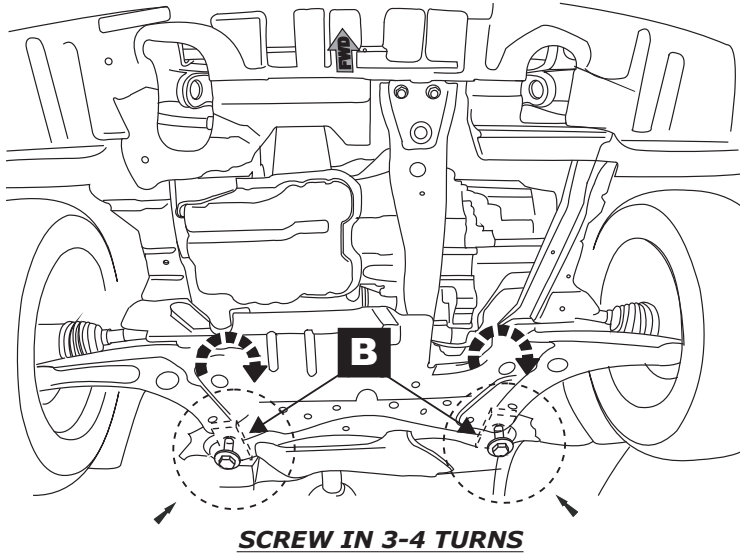


6

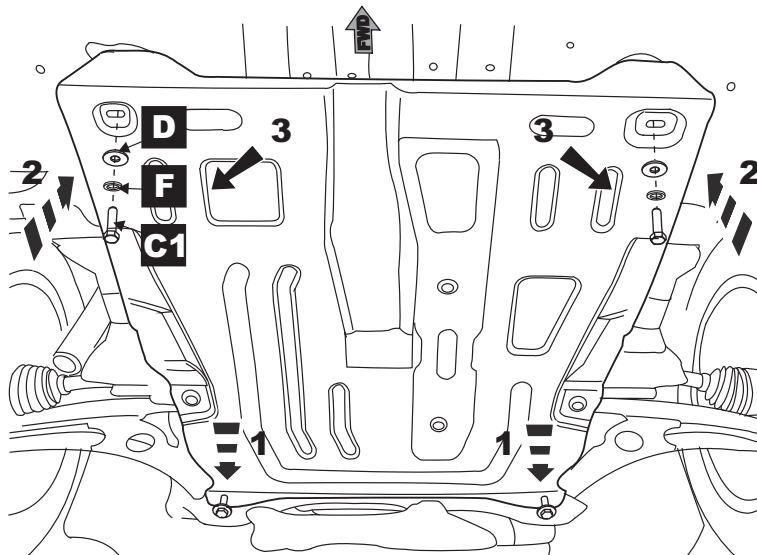



BUY GENUINE PARTS FOR TOP PERFORMANCE

7

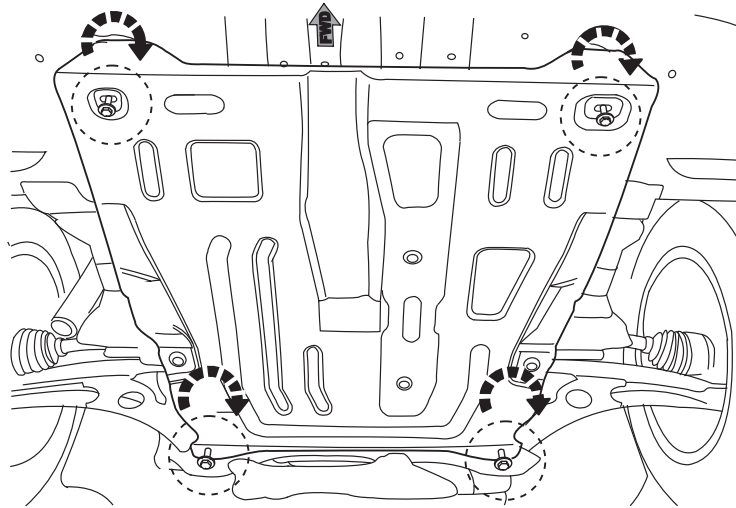


Torque = 50 Nm

8

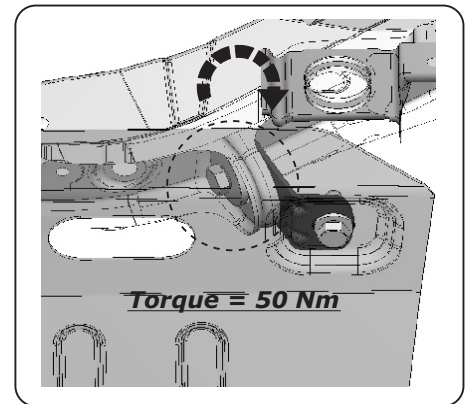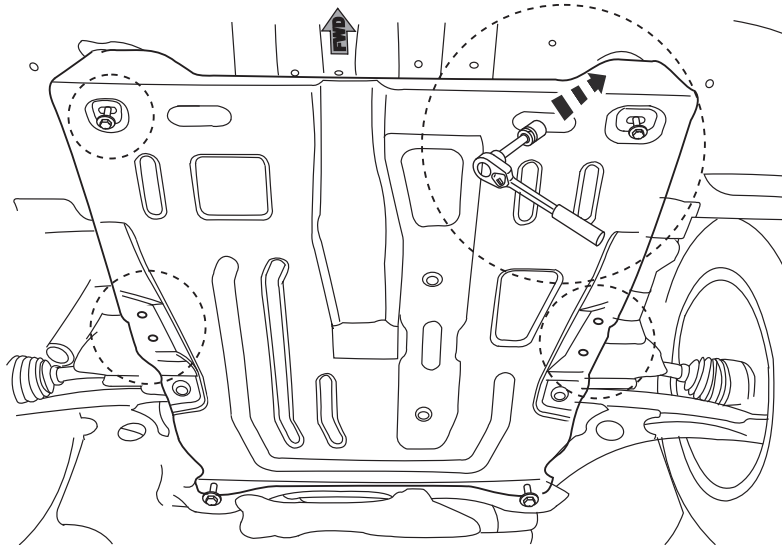

9

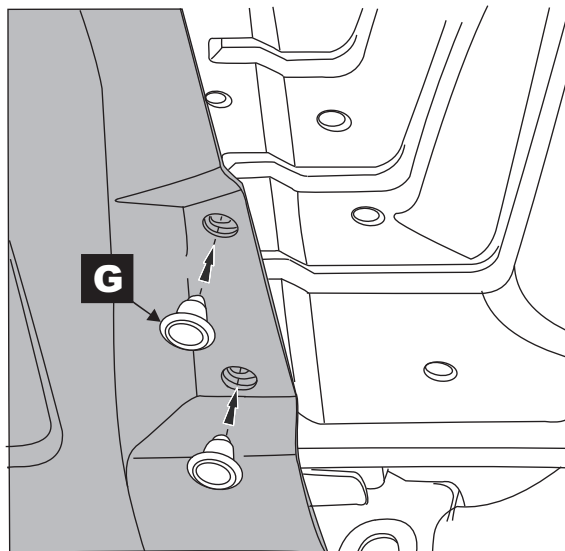

BUY GENUINE PARTS FOR TOP PERFORMANCE